

## Cloud CX261 Jumper Settings

Ref	Description	Default	Location	Notes
J1	Mic 1 phantom power	OFF	Rear right: Lower PCB	
J2	Mic 2 phantom power	OFF	Rear right: Upper rear PCB	
J3	Line 6 priority release time	3s	Centre: Lower PCB	
J4	Mono / Stereo	STEREO	Rear centre: Lower PCB	
J5(A&B)	Line 6 priority	OFF	Centre: Lower PCB	
J6	Mic 1 access contact bypass	ON	Rear left: Upper rear PCB	
J7	Mic 2 access contact bypass	ON	Rear left: Upper rear PCB	
J8	MOH source select	SEL	Centre left: Lower PCB	
J9	Music Mute NO or NC	NO	Rear left: Upper rear PCB	
J10	Mic 1 over Mic 2 priority	OFF	Front centre: Lower PCB	
J11	Mic 1 priority trigger	AVO	Front left: Lower PCB	
J12	Mic 2 priority trigger	AVO	Front centre: Lower PCB	
J13	Mic over music priority trigger	ON	Front left: Lower PCB	
J14	Remote source selection	SW	Rear left: Upper rear PCB	
J15	Music limiter threshold	0dBu	Front left: Lower PCB	
J16	600 Ohm TEL input impedance	ON	Rear right: Lower PCB	

### General Notes:

- All power to the unit must be removed before removing the top panel