

Cloud MA60 & MA60Media Jumper Settings

Ref	Description	Default	Location	Options/Notes
J1	Mic input phantom power	OFF	Main	ON/OFF
J2	Mic input transformer isolation	OFF	Main	ON/OFF
J3			Main	
J4			Main	
J5	Mic Access Bypass	ON	Main	ON/OFF
J6	MOH/Utility music source	SW	Rear	SW/L1/L2/L3/L4/MP3
J7	100 Hz mic high-pass filter	ON	Main	ON/OFF
J8	EQ card bypass	ON	Main	ON/OFF
J9	Force front panel source selection	SW	Rear	FR/SW
J10	Mic EQ bypass	ON	Rear	ON/OFF
J11	L4 Priority Release Time	3 s	Rear	3 s/6 s/12 s (no jumper)
J12A	L4 Priority	OFF	Rear	ON/OFF
J12B			Rear	
J13	65 Hz high-pass filter	OFF	Main	ON/OFF
J14	Mic priority	AVO	Main	AVO/SW/OFF
J15	Music Mute contact type	NO	Main	NO/NC