

## Cloud MPA60, MPA120 & MPA240 Jumper Settings

Ref	Description	Default	Location	Notes
J1	Mic 1 access triggers chime	OFF	Front right: Lower PCB	
J2	65Hz high pass filter	ON	Front right: Lower PCB	
J3	EQ card socket bypass	ON	Front right: Lower PCB	
J4	Remote source selection disable	SW	Centre right: Lower PCB	
J5(A&B)	Line input 6 priority	OFF	Rear right: Lower PCB	
J6	Mic over music priority	ON	Centre right: Lower PCB	
J7	Line 6 priority release time	3S	Rear right: Lower PCB	
J8	Mic 1 priority over other mics	OFF	Rear right: Lower PCB	
J9	Mic 1 phantom power	OFF	Rear right: Lower PCB	
J10	Mic 2 phantom power	OFF	Rear right: Lower PCB	
J11	Mic 3 phantom power	OFF	Rear right: Lower PCB	
J12	Mic 4 phantom power	OFF	Rear centre: Lower PCB	
J13	Mic 1 access contacts bypass	ON	Rear right: Lower PCB	Beneath upper rear PCB.
J14	Music Mute NO ro NC	NO	Rear left	

### General Notes:

- Jumpers beneath upper PCBs are best accessed with long-nosed pliers.
- All power to the unit must be removed before removing the top panel