

Cloud Z4ii & Z8ii Jumper Settings

Ref	Description	Default	Location	Notes
J1	Remote source selection	SW	Rear top: Zone PCB	
J2	Line 6 priority	OFF	Front top: Zone PCB	
J3	Line 6 priority release time	3s	Front top: Zone PCB	
J4	Mic over facility input priority	OFF	Rear top: Zone PCB	
J5	Paging mic priority trigger	VOX	Rear top: Zone PCB	
J6	Mics 1 and 2 over music priority	ON	Front top: Zone PCB	Not available on older units.
J1	Mic 1 phantom power	OFF	Rear right: Lower PCB	
J2	Mic 2 phantom power	OFF	Rear right: Lower PCB	
J3	Paging mic phantom power	OFF	Rear centre: Lower PCB	
J4	Music Mute NO or NC	NO	Centre left: Lower PCB	

General Notes:

- All power to the unit must be removed before removing the top panel
- Z4ii/Z8ii is split into 1 lower pcb and a zone pcb for each zone. Jumpers on the Zone PCB only affect that zone.
- Z4ii/Z8ii has facility port connections for every zone to support the LM-1 and DM-1 active remote panels.