

| Ref | Description | Default | Location | Notes |
|-----|----------------------------------|---------|------------------------|-------------------------------|
| J1 | Remote source selection | SW | Rear top: Zone PCB | |
| J2 | Line 6 priority | OFF | Front top: Zone PCB | |
| J3 | Line 6 priority release time | 3s | Front top: Zone PCB | |
| J4 | Mic over facility input priority | OFF | Rear top: Zone PCB | |
| J5 | Paging mic priority trigger | VOX | Rear top: Zone PCB | |
| J6 | Mics 1 and 2 over music priority | ON | Front top: Zone PCB | Not available on older units. |
| J1 | Mic 1 phantom power | OFF | Rear right: Lower PCB | |
| J2 | Mic 2 phantom power | OFF | Rear right: Lower PCB | |
| J3 | Paging mic phantom power | OFF | Rear centre: Lower PCB | |
| J4 | Music Mute NO or NC | NO | Centre left: Lower PCB | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |

General Notes:

- All power to the unit must be removed before removing the top panel

- Z4II/Z8II is split into 1 lower pcb and a zone pcb for each zone. Jumpers on the Zone PCB only affect that zone.

- Z4II/Z8II has facility port connections for every zone to support the LM-1 and DM-1 active remote panels.

Cloud Electronics Limited 140 Staniforth Road, Sheffield, S9 3HF. England Telephone: +44 (0)114 244 7051 Fax: +44 (0)114 242 5462 Web: www.cloud.co.uk E-mail: info@cloud.co.uk

Cloud Electronics USA 2065 Sidewinder Drive, Suite 200, Park City, Utah 84060. United States of America. Toll Free: 0855 810 0161 Web: www.cloudusa.pro E-mail: sales@cloudusa.pro