

Cloud 46-80 & 46-80T Jumper Settings



Ref	Description	Options	Default	Location	Notes
J1	CDPM bus termination		ON	Upper Board	This should always be ON. Do not remove
J2	Mic-over-Facility Port priority	ON / OFF	OFF	Upper Board	
J3	Zone 1 65 Hz High Pass Filter	ON / OFF	OFF *	Main Board	
J4	Zone 2 65 Hz High Pass Filter	ON / OFF	OFF *	Main Board	
J5	Zone 3 65 Hz High Pass Filter	ON / OFF	OFF *	Main Board	
J6	Zone 4 65 Hz High Pass Filter	ON / OFF	OFF *	Main Board	
J7	Power amp Zone 2 input source	D / R	D	Main Board	
J8	Power amp Zone 3 input source	D / R	D	Main Board	
J9	Power amp Zone 4 input source	D / R	D	Main Board	
J10	Factory use only		Absent	Main Board	Do not fit a jumper here
J11	NVM Reset		Absent	Main Board	Restores factory settings
J12	Factory use only		Absent	Main Board	Do not fit a jumper here
J13	Factory use only		Absent	Main Board	Do not fit a jumper here

General Notes:

- All power to the unit must be removed before removing the top panel
- All jumpers in a set must be moved together

* These jumpers are factory-set to ON in model 46-80T & set to OFF in model 46-80.

Cloud Electronics Limited

140 Staniforth Road, Sheffield, S9 3HF. England
Telephone: +44 (0)114 244 7051
Web: www.cloud.co.uk E-mail: info@cloud.co.uk

Cloud Electronics USA

1960 Sidewinder Drive, Suite 211, Park City,
Utah 84060. United States of America.
Tel: +1 435 640 2474
Web: www.cloudusa.pro E-mail: sales@cloudusa.pro